
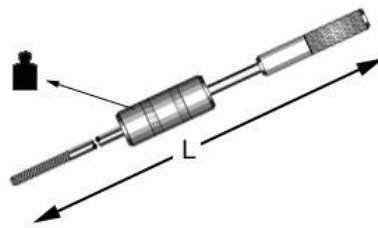
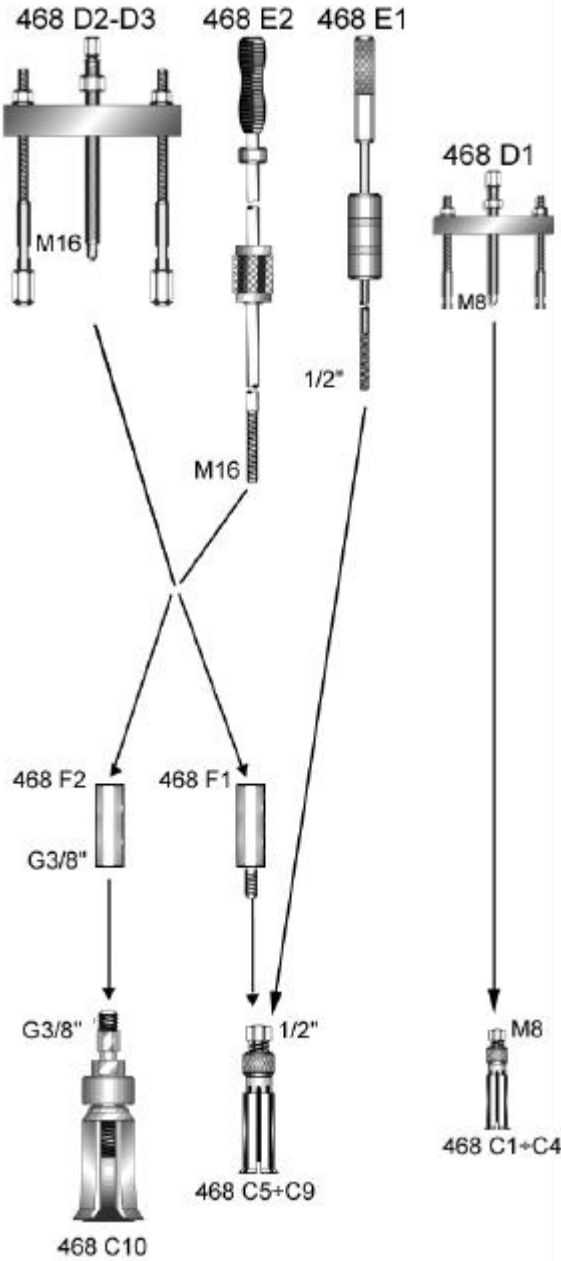


ASSORTIMENTO IN CASSETTA			468 KS7	468 KS11	468 C
			Capacità 10÷38 mm	Capacità 6÷60 mm	
Estrattori ad espansione	Capacità Ø mm				 <p><b>I</b> Pinze per estrazione di cuscinetti incastrati</p> <p><b>F</b> Pincés pour extraction de roulements encastrés</p> <p><b>GB</b> Pullers for extracting embedded bearings</p> <p><b>D</b> Abziehklemmen für Kugellager</p> <p><b>NL</b> Binnentrekkers voor het lostrekkers van ingebouwde lagers</p> <p><b>E</b> Pinzas para la extracción de rodamientos empotrados</p>
	min	max			
468 C1	6	8		X	
468 C2	8	10		X	
468 C3	10	13	X	X	
468 C4	13	18	X	X	
468 C5	18	22,5	X	X	
468 C6	22,5	30	X	X	
468 C7	30	38	X	X	
468 C8	38	50		X	
468 C9	50	60		X	
Supporti	Capacità mm				
	min	max			
468 D1	30	100	X	X	
468 D3	70	200	X	X	
Adattatore					
468 F1			X	X	

### Uso – Utilisation – Use – Gebrauch – Gebruik – Utilización

<b>I</b>	Introdurre la pinza di Ø corrispondente nell'alesaggio del cuscinetto	
<b>F</b>	Introduire la pince du Ø correspondant dans l'alésage	
<b>GB</b>	Insert puller of corresponding Ø through bearing bore	
<b>D</b>	Die Spreizklemme in die Bohrung des Kugellagers einführen	
<b>NL</b>	Steek de trekker in de binnenring van het lager	
<b>E</b>	Introducir la pinza de Ø apropiado en el orificio del rodamiento	
<b>I</b>	Avvitare il dado esagonale per provocare l'apertura della pinza	
<b>F</b>	Écarter les griffes de la pince en vissant l'écrou 6 pans	
<b>GB</b>	Rotate hexagon to screw-in plunger thereby expanding the wedges	
<b>D</b>	6-Kant-Mutte anziehen, um die Klemme auseinanderzuspreizen	
<b>NL</b>	Draai de 6-kant aan zodat de wiggen zich in het lager vastklemmen	
<b>E</b>	Atornillar con la tuerca de 6 caras para provocar la separación de la pinza	
<b>I</b>	Avvitare l'ausiliario di estrazione (massa a inerzia o vite centrale di un estrattore) sulla pinza	
<b>F</b>	Visser l'auxiliaire d'extraction (Masse à inertie ou vis centrale d'une potence) sur la pince	
<b>GB</b>	Fit puller accessory e.g. (slide-hammer or beam centre screw)	
<b>D</b>	Abziehklemme (Gleithammer oder Spindel einer Abziehvorrichtung) mit der Abziehilfe	
<b>NL</b>	Schroef vervolgens (een slaggewicht of de spindel van een trekstang) op de trekker	
<b>E</b>	Atornillar el auxiliar de extracción (masa de inercia o tornillo central de un extractor) sobre la pinza	

Montaggio – Montages – Fitting –  
Montieren – Montage – Montaje



<b>468 E1</b>	L = 450		1 Kg
<b>468 E2</b>	L = 660		1,6 Kg
<b>468 D1</b>	C = 30÷100	P = 100	
<b>468 D2</b>	C = 40÷110	P = 180	
<b>468 D3</b>	C = 70÷200	P = 240	

	Ø mm	
	min	max
<b>468 C1</b>	6	8
<b>468 C2</b>	8	10
<b>468 C3</b>	11	13
<b>468 C4</b>	13	18
<b>468 C5</b>	18	22
<b>468 C6</b>	22	30
<b>468 C7</b>	30	38
<b>468 C8</b>	38	50
<b>468 C9</b>	50	60
<b>468 C10</b>	70	110